




Show 'n Tell Small Quilt Carrier

Designed specifically as a Creative Studio® V6.0
project for Statler Stitcher® owners.

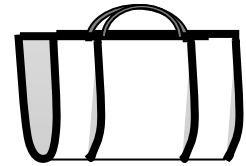

This carrier is terrific for carrying your smaller, rolled quilts to Show 'n Tell at your quilt guild.

What you will need:

3/4 yd Top Fabric, 42-44" wide
1 yd Backing fabric, 42-44" wide
1 piece of Batting, 30" by 44"
2 - 12" dowels, 3/8" diameter

10-12" Accent fabric for binding.
Cut into 2 1/2" strips by wof.
2 3/4 yd Webbing for handles, at least 1" wide.
Cut off 2 pieces 14" long.

Directions:

Prep Steps:

- Load the fabric, backing and batting on your longarm.
- Practice any technique, attempting to quilt the fabric with consistent density.
- When done quilting, square up the quilt creating a 24" x 40" rectangle.
- Prepare the binding, attach to all four sides and finish.

Figure #1

- Find the center point on both long sides.
- Place two pins 7" from the center, on both sides.
- Position the 14" pieces of webbing between the pins, running along the inside edge of the binding.
- Make a tube for the dowels by stitching along the long ends, close to the edges.

Figure #2 - First side

- Fold the long piece of webbing in half, and mark this position.
- Place one end of the long piece of webbing over one of the short ends and pin in place, allowing 1" extra to extend beyond the edge. Be sure to completely cover the end of the shorter piece. This holds the dowel in place.
- Stitch both sides of the webbing, close to the edges. Backstitch over the short ends.

Figure #3 - Second side

- Center Pin - Align the center of the webbing with the opposite corner. Pin in place.
- Stitch the outer edge of the webbing first. This allows access to the shorter pieces which will enclose the dowels.
- Slide the dowel pieces in place.
- Stitch the inside edge, being sure the ends of the shorter webbing is covered.
- Reinforce by backstitching over the ends of the dowel tubes.

Figure #4 - Finish

- Measure the first handle, and make the second one the same size.
- To finish the second handle, fold the raw edges of the webbing under and stitch over the beginning piece. Be sure to enclose all raw edges.
- Backstitch to reinforce.

